



Artikel-Nummer Article Code Número d'article	Artikel Article Article	Inhalt Volume (cl)	Durchmesser Diameter (mm)	Höhe Height (mm)	Gewicht Weight (g)	inch / OZ	Artikel-Nummer Article Code Número d'article	Artikel Article Article	Inhalt Volume (cl)	Durchmesser Diameter (mm)	Höhe Height (mm)	Gewicht Weight (g)	inch / OZ
ISB1922	Teller tief Plate deep Assiette creuse	229	37	575		9"	ISB1328	Suppentasse stapelbar Cream soup cup stackable Tasse à consommé empilable	30	98	63	250	10 1/2 OZ
ISB1929	Teller tief Plate deep Assiette creuse	305	36	940		12"	ISB1716	Untertasse Saucer Sous-tasse	163	18	220		6 3/8"
ISB2116 ISB2120 ISB2123 ISB2126 ISB2128 ISB2131	Teller flach Plate flat Assiette plate	163 207 242 261 286 314	18 20 21 23 23 25	230 400 555 715 880 1025		6 3/8" 8" 9 1/2" 10 1/4" 11 1/4" 12 3/8"	ISB1128	Suppentasse stapelbar o. Henkel Cream soup cup stackable w/o handle Tasse à consommé empilable s. handle	30	98	63	230	10 1/2 OZ
ISB0210	Tasse stapelbar Cup stackable Tasse empilable	11	62	60	120	3 7/8 OZ	ISB1716	Untertasse Saucer Sous-tasse	163	18	220		6 3/8"
ISB1713	Untertasse Saucer Sous-tasse	129	17	125		3 5/8"	ISB3515	Gießer Creamer Crémier	15		77	160	5 3/8 OZ
ISB0225	Tasse stapelbar Cup stackable Tasse empilable	27	87	72	240	9 1/2 OZ	ISB1413 ISB1417 ISB1423 ISB1429	Schale Dish Ravier	132 176 236 306	33 38 38 46	170 325 515 1100		5 1/4" 7" 9 1/4" 12"
ISB1716	Untertasse Saucer Sous-tasse	163	18	220		6 3/8"	ISB1415	Schale Dish Ravier	59	150	62	340	20 3/4 OZ 6"
ISB0228	Tasse stapelbar Cup stackable Tasse empilable	30	98	63	240	10 1/2 OZ							
ISB1716	Untertasse Saucer Sous-tasse	163	18	220		6 3/8"							
ISB0026 ISB0032	Mug stapelbar Mug stackable Tasse haute empilable	28 37	80 88	88 96	275 340	9 7/8 OZ 13 OZ							
ISB1716	Untertasse Saucer Sous-tasse	163	18	220		6 3/8"							

